



Illustrated Parts List

Model Series

40G700

TYPE NUMBERS
0100 through 1222.

TABLE OF CONTENTS



Air Cleaner	7
Alternators	9
Blower Housing	7
Camshaft	2, 5
Carburetor	6
Controls	8
Crankshaft	4
Cylinder	2
Cylinder Head	5
Electric Starter	8
Engine Sump	2, 3
Exhaust System	8
Fuel Supply	6
Flywheel	8
Gasket Set-Carburetor	6
Gasket Set-Engine	6
Gasket Set-Valve	5
Governor Spring	8
Ignition	9
Intake Manifold	5
Kit-Carburetor Overhaul	6
Lubrication	4
Pistons, Rings, Connecting Rod	4
Valves	5



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

40G700

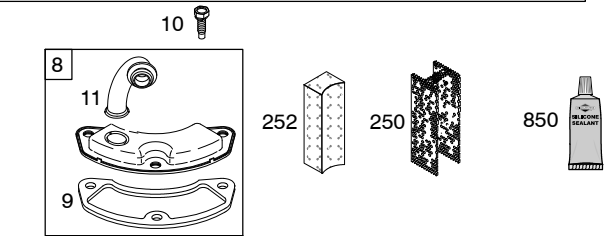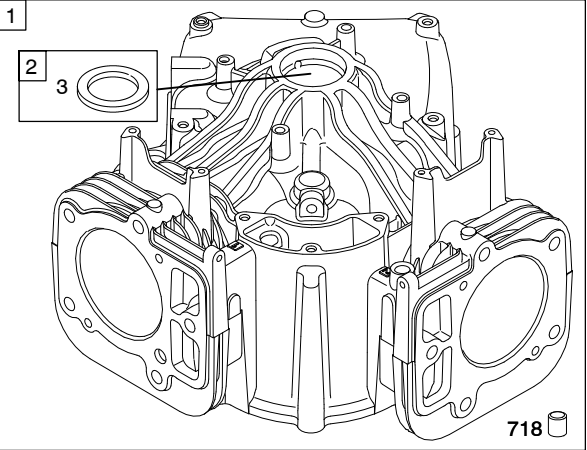

1319 WARNING LABEL


WARNING

Read and follow all instructions before starting engine.
Do not touch moving parts.
Do not use a screwdriver to adjust the carburetor.
Do not use a screwdriver to adjust the throttle cable.
Do not use a screwdriver to adjust the choke cable.
Do not use a screwdriver to adjust the choke cable.
Do not use a screwdriver to adjust the choke cable.






REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

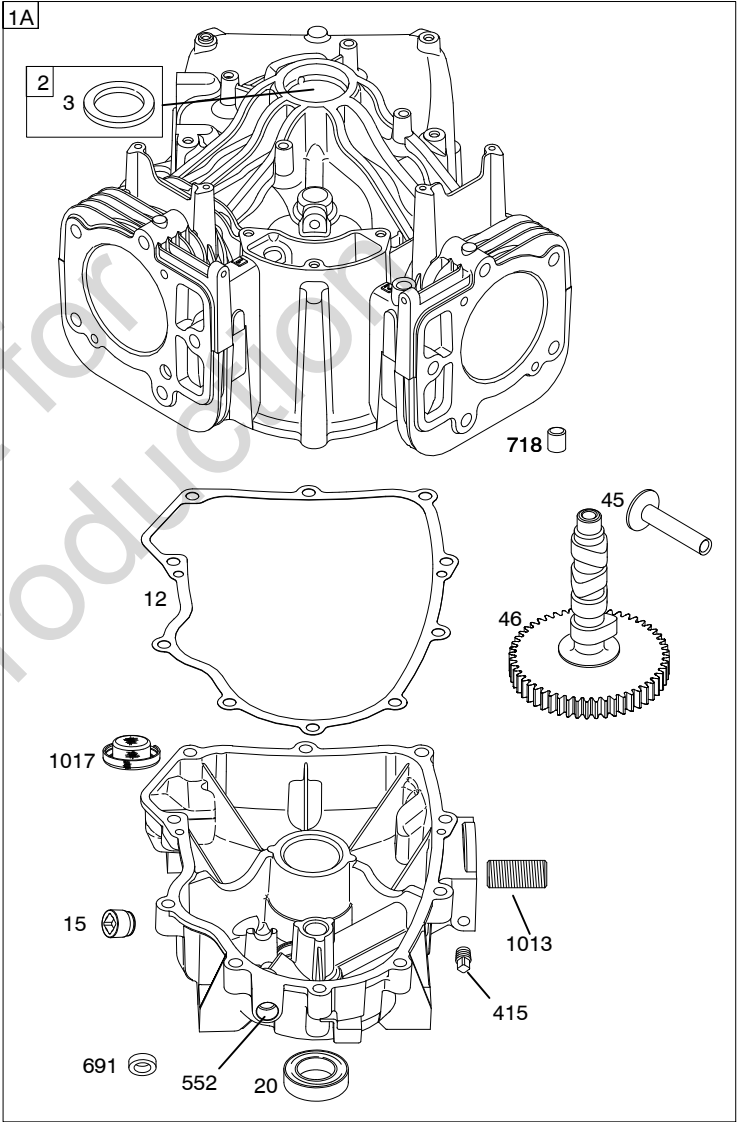


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

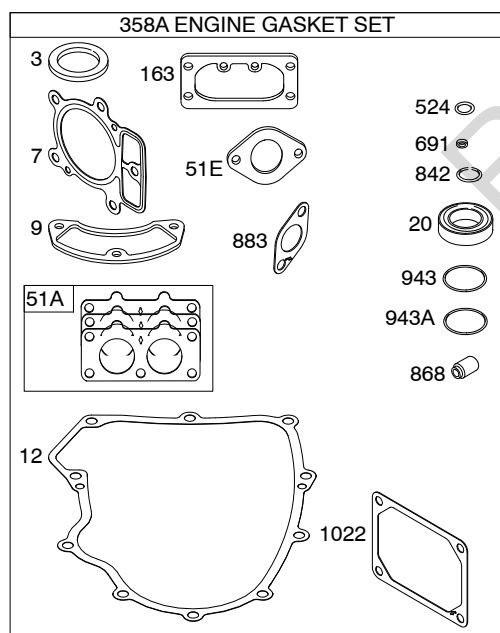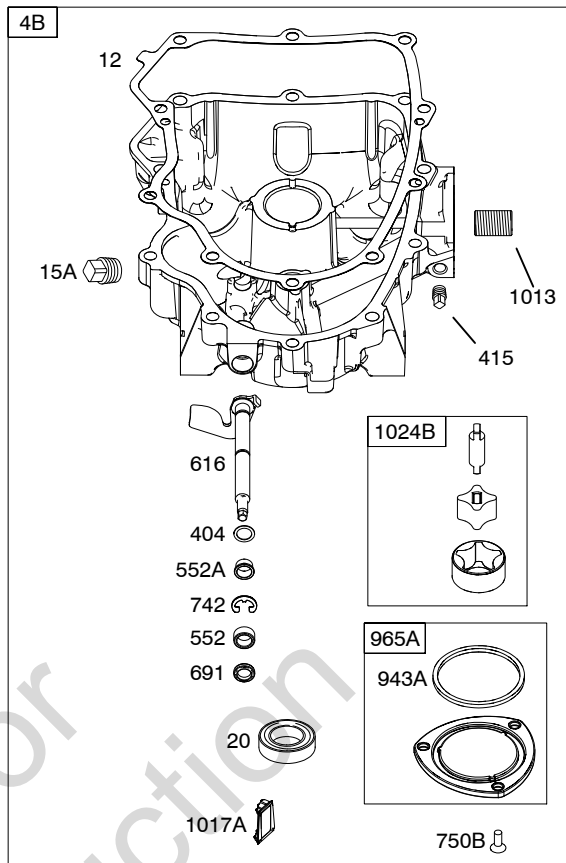
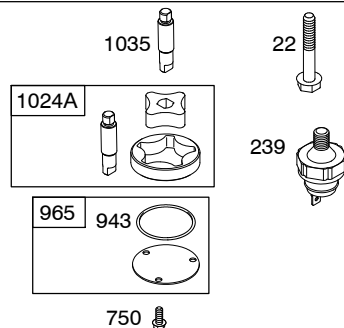
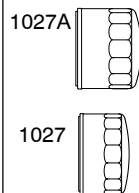
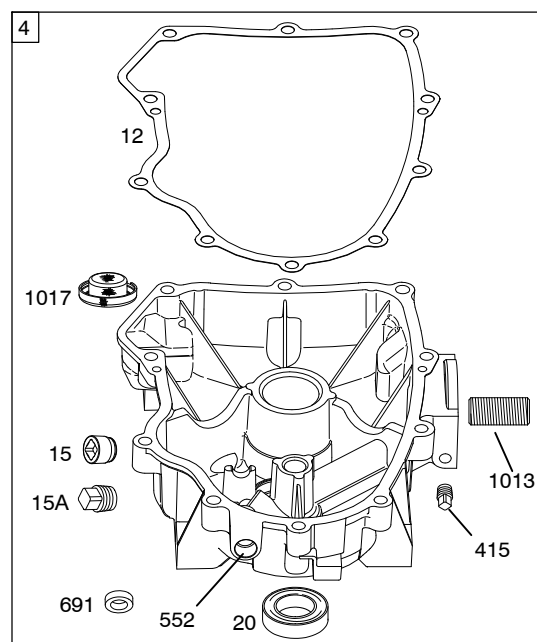


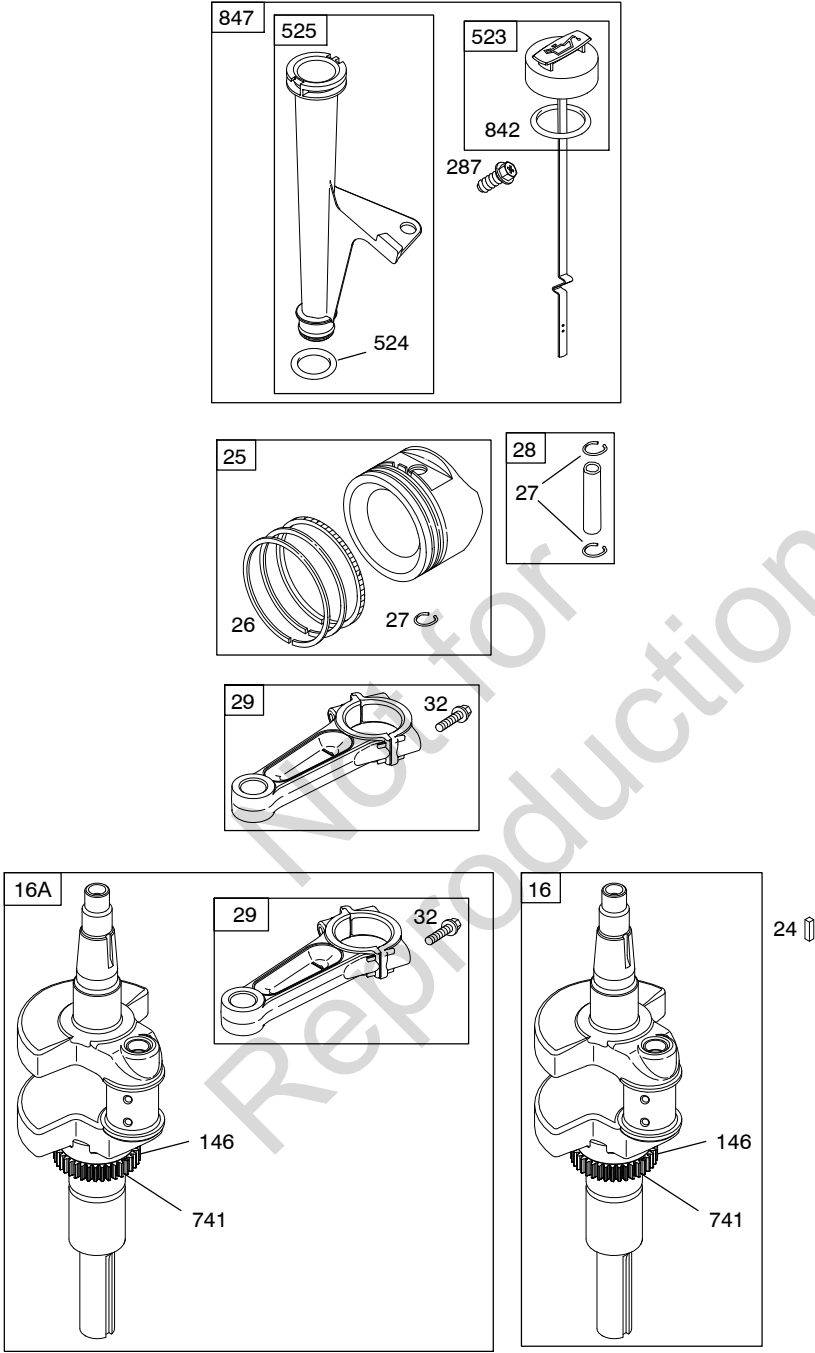



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

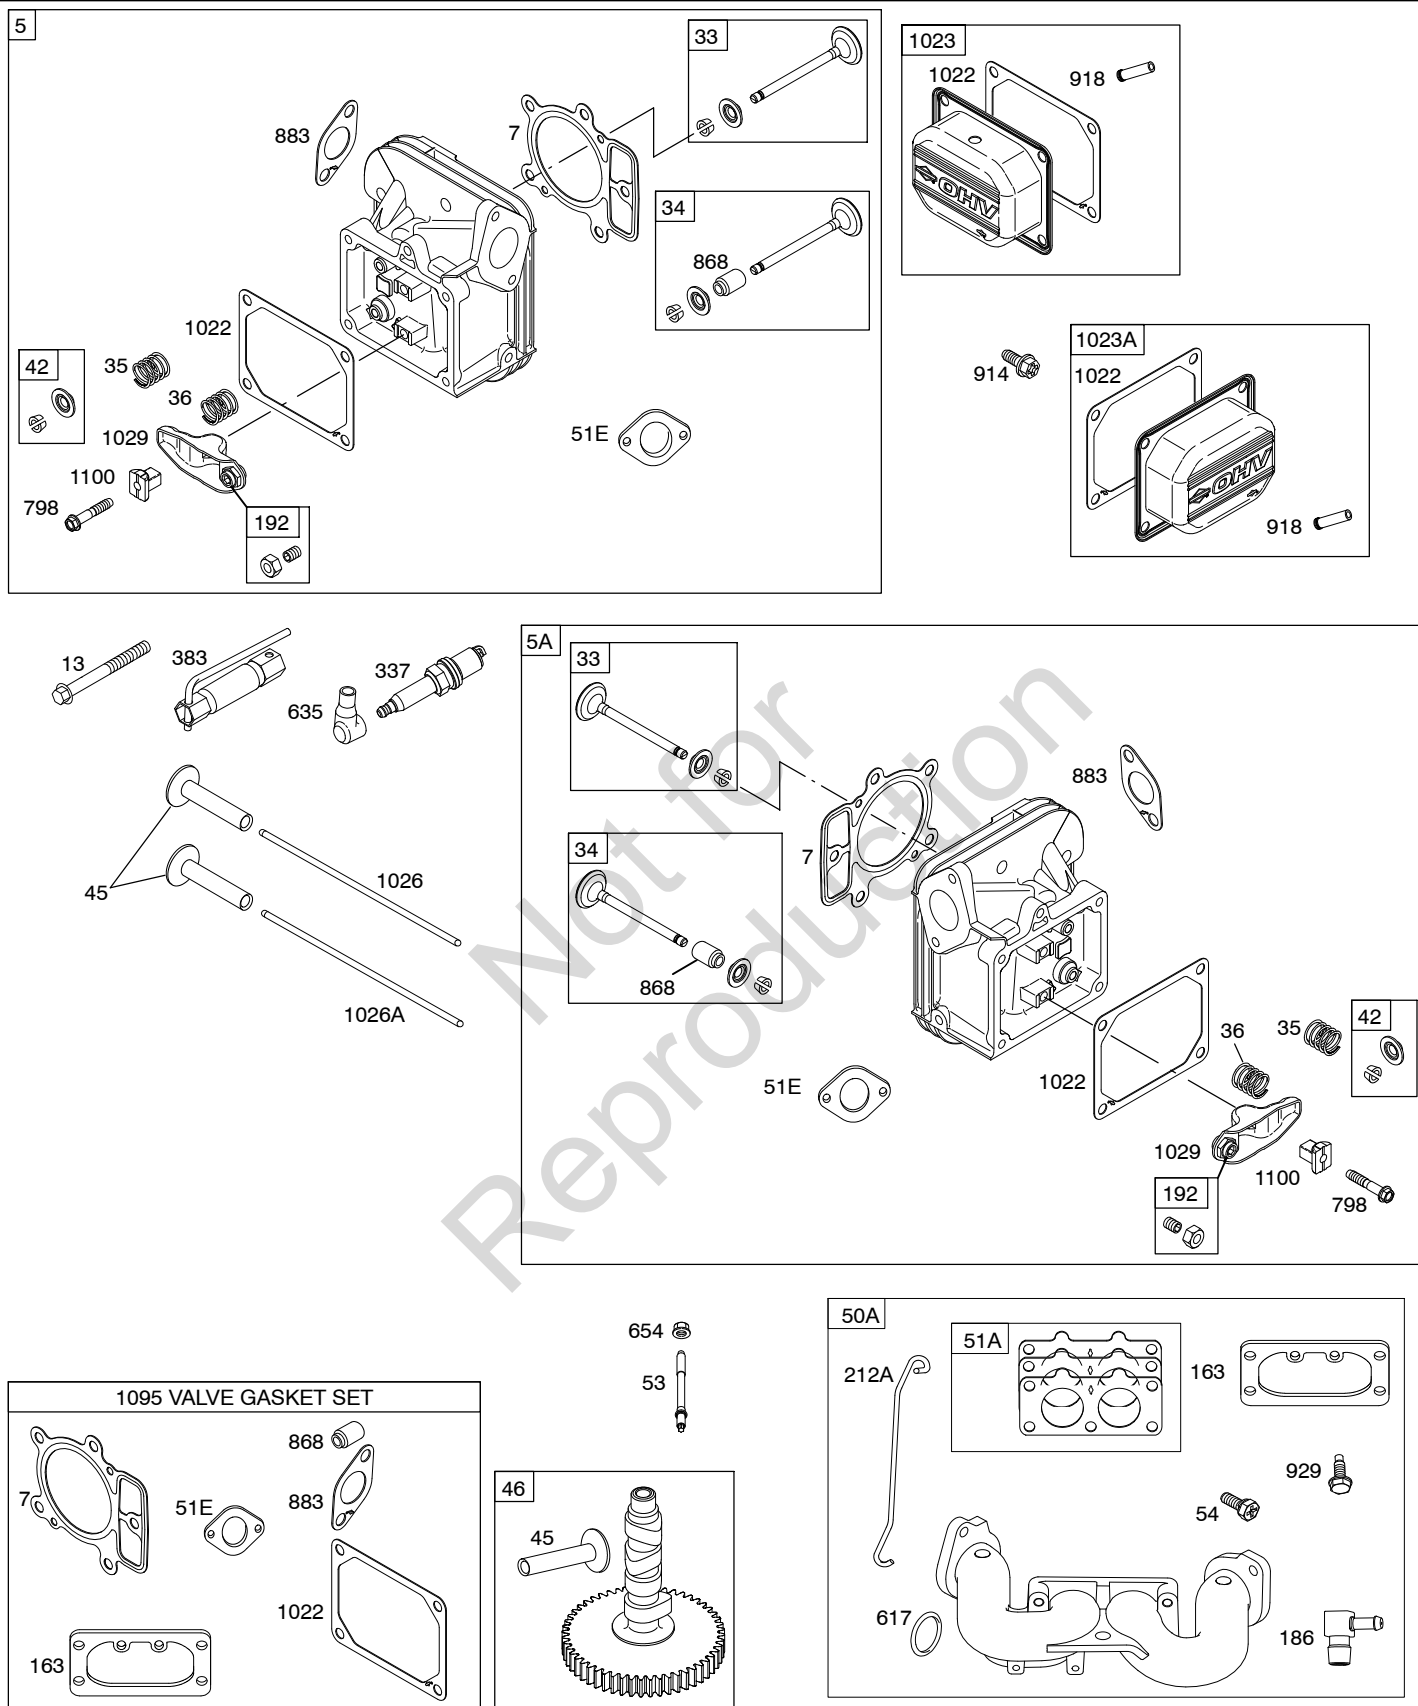





40G700

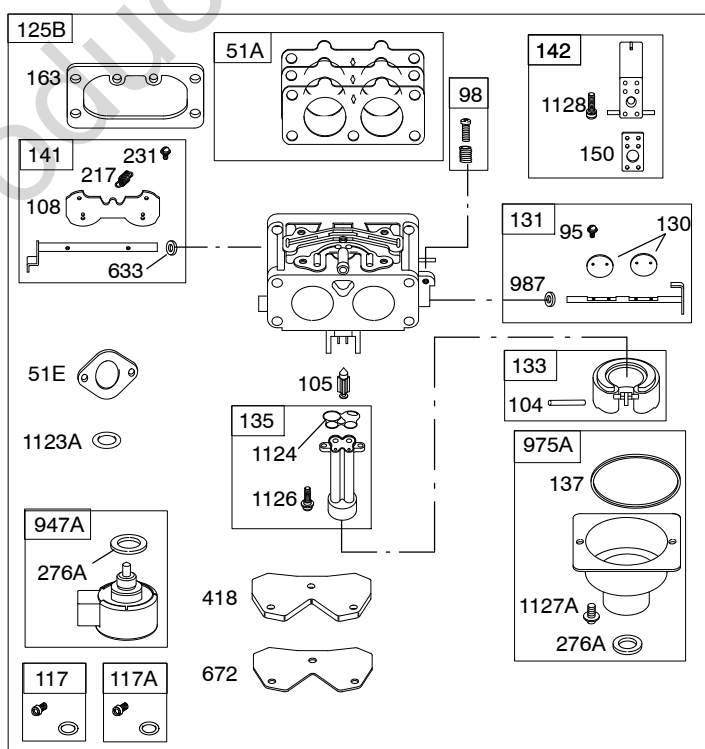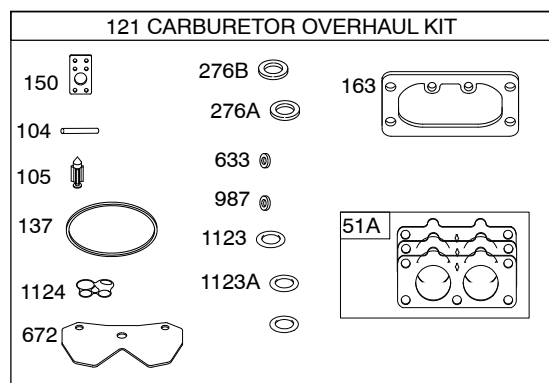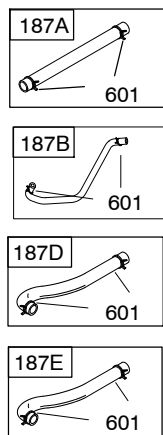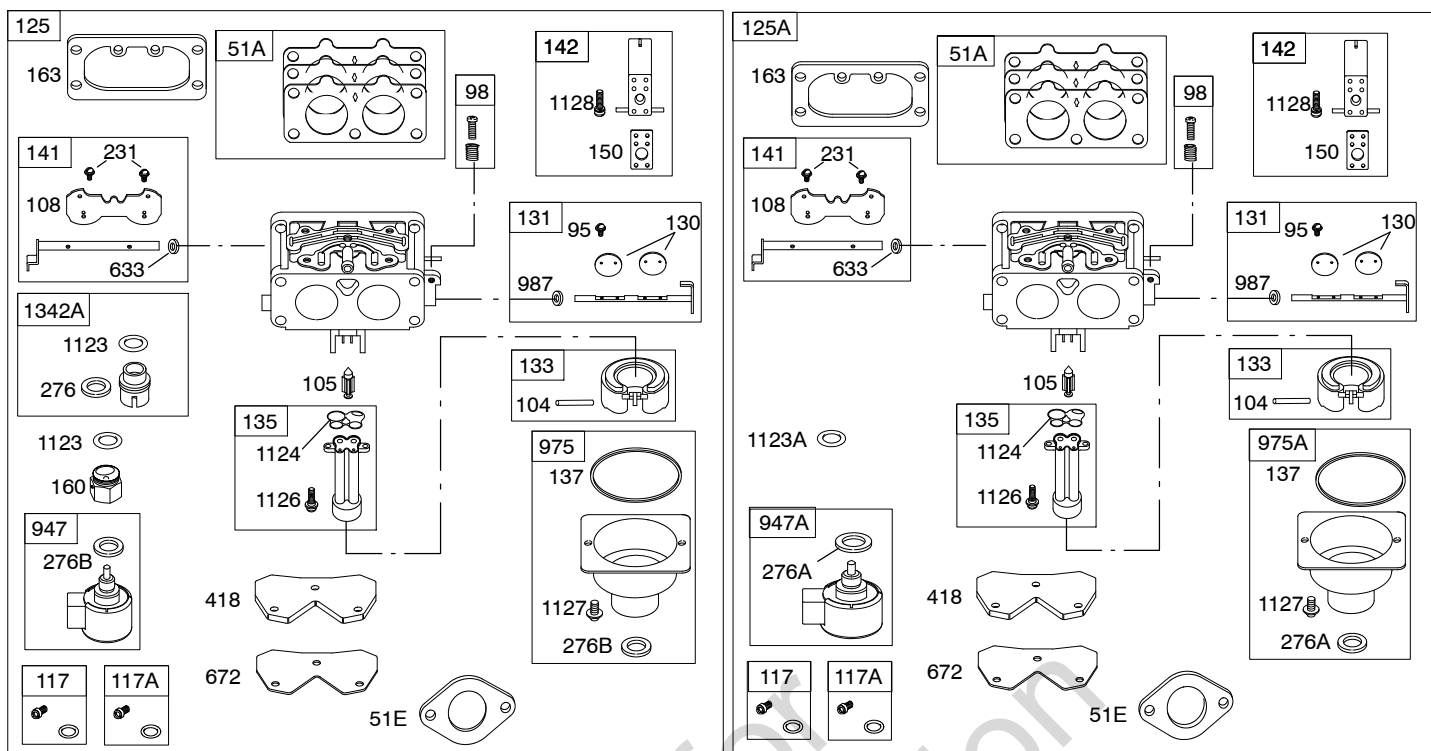

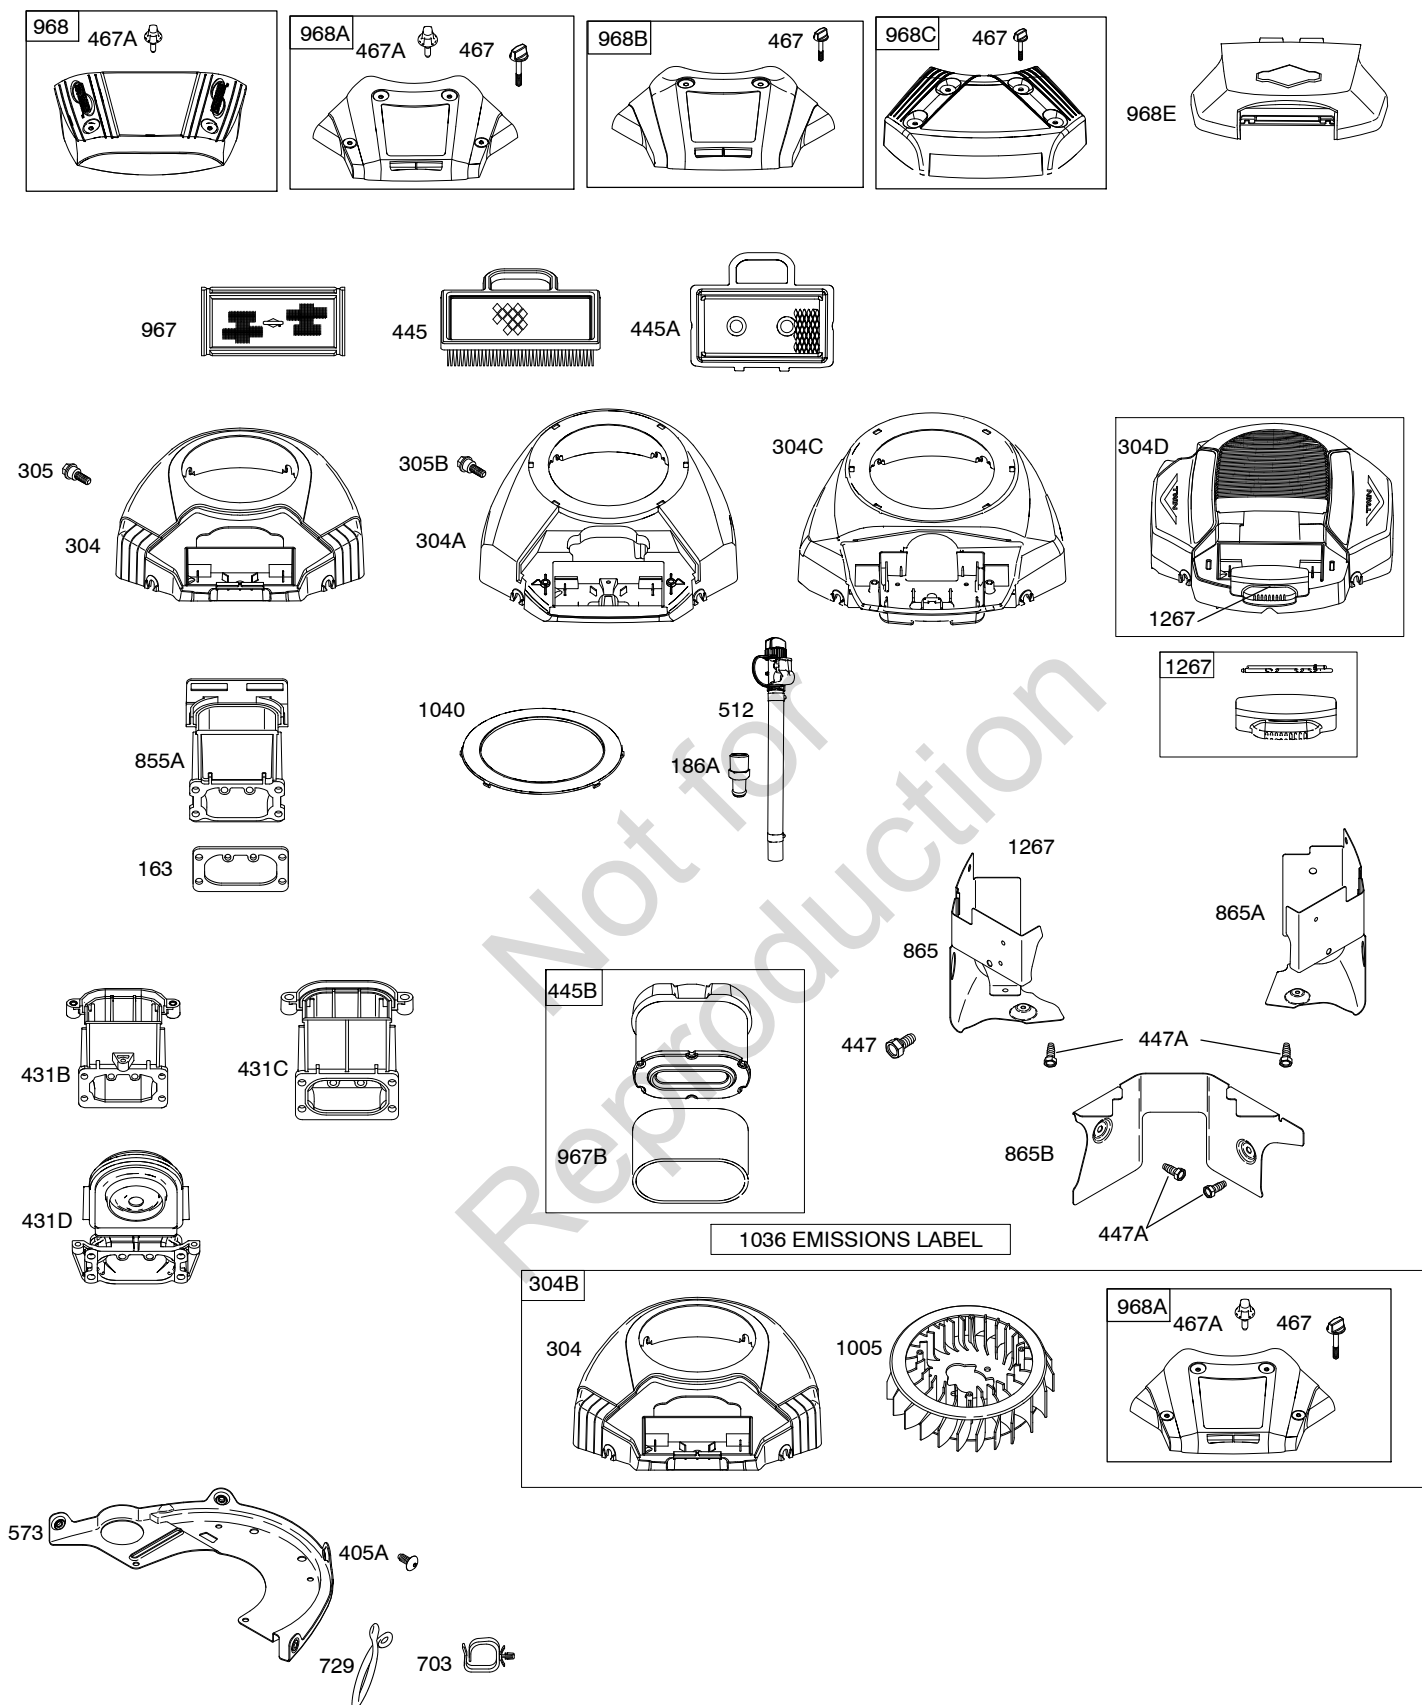

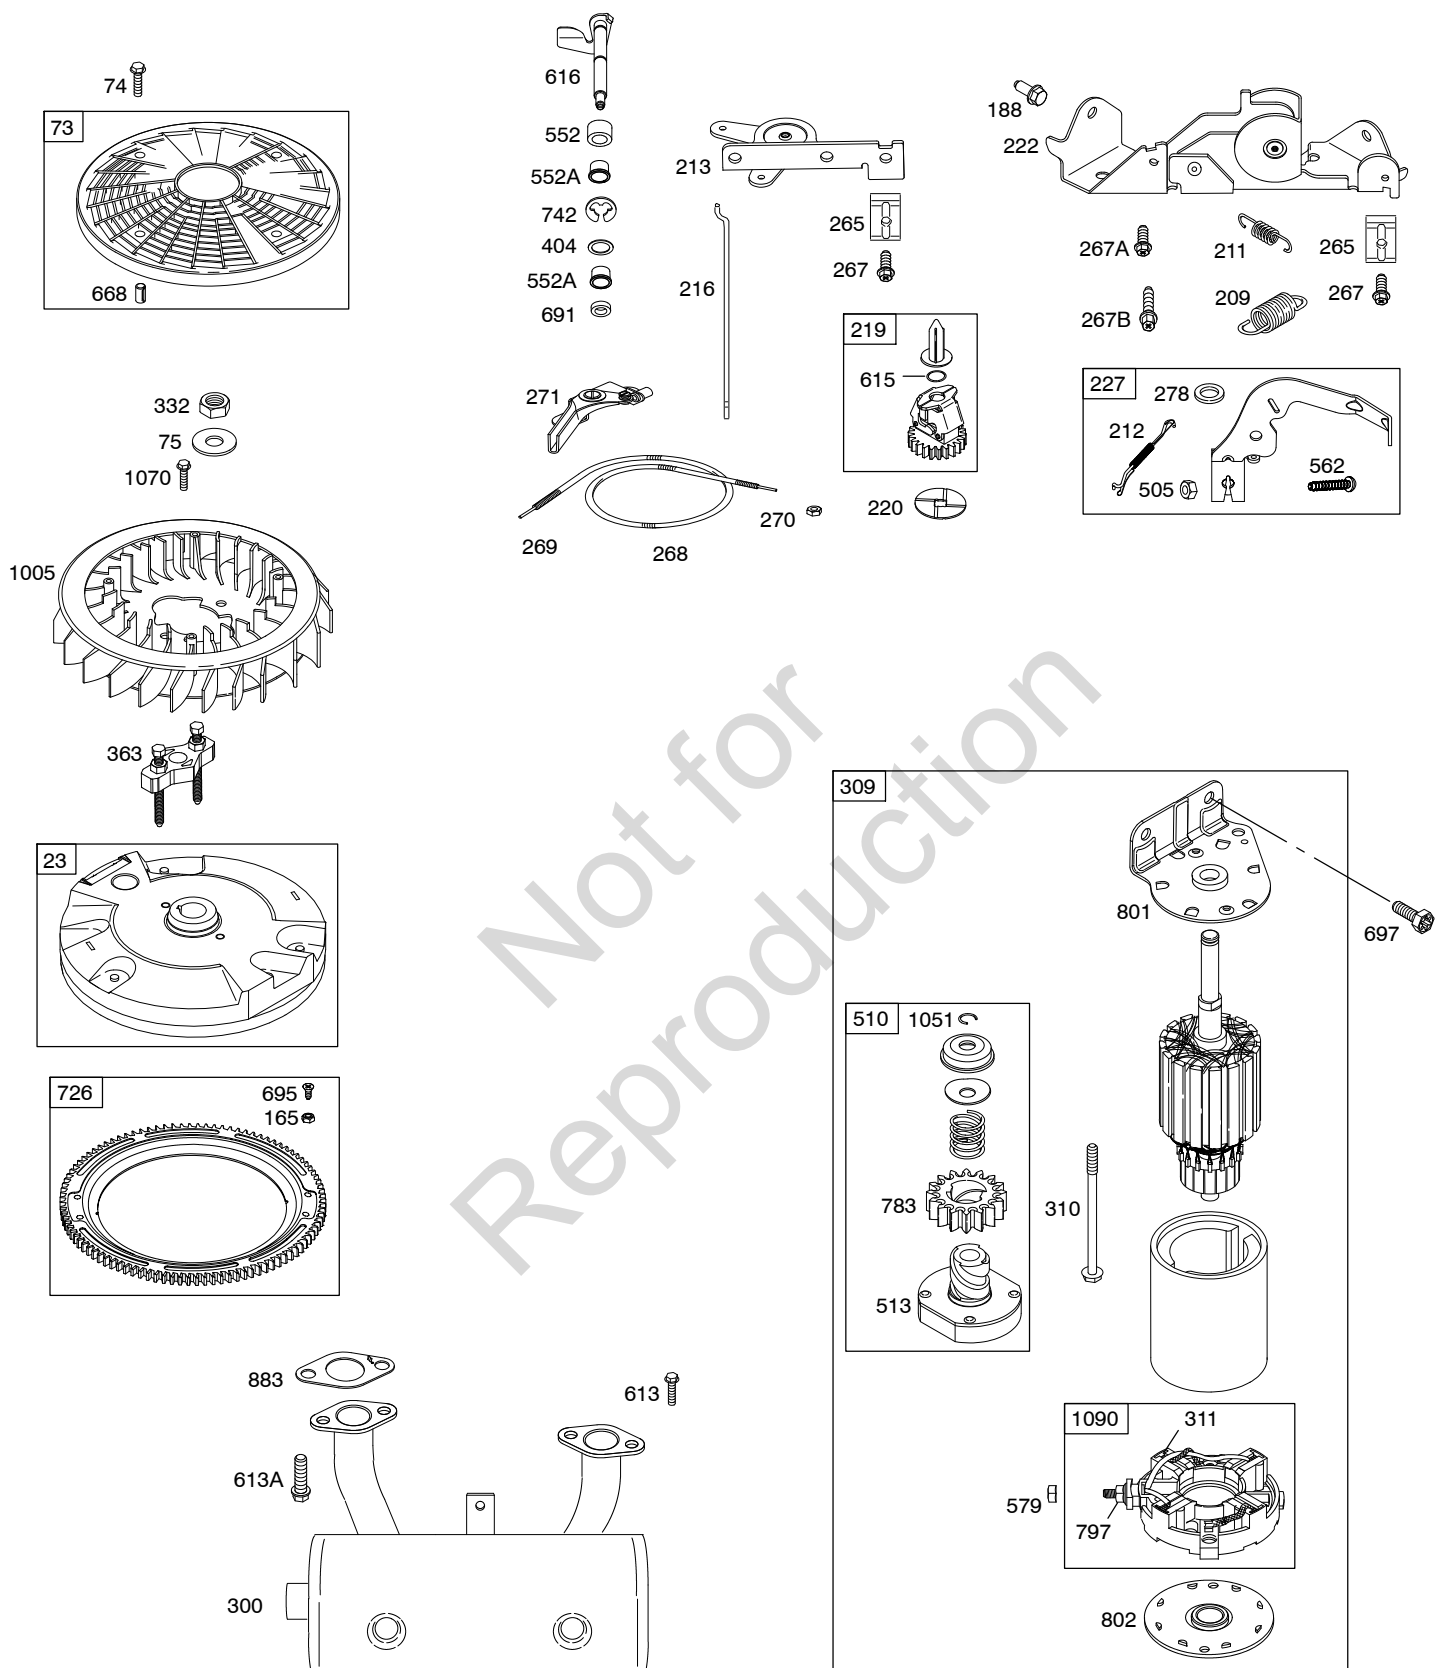

DUAL CIRCUIT		TRI CIRCUIT		10-16 AMP	
474C	1059	474A	1059	474B	1059
877B		877C		877D	
					
		878C			
					
et size will on manual		526A		526	
501A				501B	
					

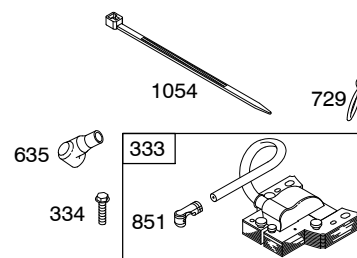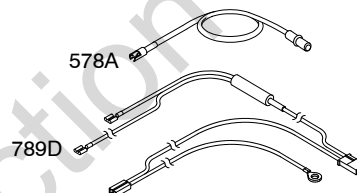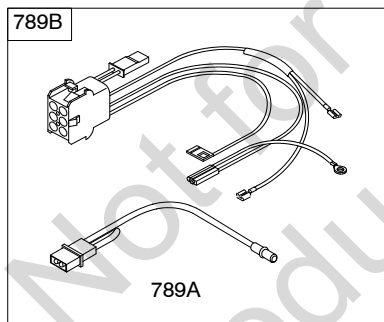

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	795118	Cylinder Assembly (Used After Code Date 07070900). ----- Note ----- 699751 Cylinder Assembly (Used Before Code Date 07071000 and After Code Date 03082800).	11	792184	Tube-Breather	29	699699	Rod-Connecting (Standard) (Used After Code Date 04010800). ----- Note ----- (For Replacement Connecting Rod, See Reference 16A) (Used Before Code Date 04010900).
1A	699742	Cylinder Assembly (Used Before Code Date 03082900).	12	★697227	Gasket-Crankcase	32	690976	Screw (Connecting Rod)
2	499585	Kit-Bushing/Seal (Magneto Side)	13	793988	Screw (Cylinder Head) (Used After Code Date 08063000). ----- Note ----- 791130 Screw (Cylinder Head) (Used Before Code Date 08070100).	33	697576	Valve-Exhaust
3	★391086S	Seal-Oil (Magneto Side)	15	691680	Plug-Oil Drain (1/2" Square Flush)	34	792200	Valve-Intake
4	699747	Sump-Engine (Used After Code Date 03082800). ----- Note ----- 690069 Sump-Engine (Used Before Code Date 03082900).	15A	690946	Plug-Oil Drain	35	694865	Spring-Valve (Intake)
4B	796307	Sump-Engine Used on Type No(s). 0118, 0122, 0185, 1222.	16	699700	Crankshaft (Used After Code Date 04010800). ----- Note ----- 796237 Crankshaft Used on Type No(s). 0118, 0122, 0185, 1222.	36	694865	Spring-Valve (Exhaust)
5	792299	Head-Cylinder (Cylinder 1) ----- Note ----- 796231 Head-Cylinder (Cylinder 1) Used on Type No(s). 0118, 0122, 0185, 1222.	16A	699701	Crankshaft (Includes Connecting Rod) (Used Before Code Date 04010900).	42	499586	Keeper-Valve
5A	792300	Head-Cylinder (Cylinder 2) ----- Note ----- 796232 Head-Cylinder (Cylinder 2) Used on Type No(s). 0118, 0122, 0185, 1222.	20	★795387	Seal-Oil (PTO Side)	45	690977	Tappet-Valve
7	★Δ693997	Gasket-Cylinder Head	22	694966	Screw (Crankcase Cover/Sump)	46	790562	Camshaft (Used After Code Date 03082800). ----- Note ----- Camshaft (Used Before Code Date 03082900). No Longer Available. Use Kit 1A.
8	792185	Breather Assembly	23	691053	Flywheel ----- Note ----- 691054 Flywheel Used on Type No(s). 0100, 0101.	50A	695241	Manifold-Intake
9	★690937	Gasket-Breather	24	222698S	Key-Flywheel	51	690950	Gasket-Intake
10	691108	Screw (Breather Assembly)	25	793647	Piston Assembly (Standard)	51A	★795123	Gasket-Intake
			26	698430	Ring Set (Standard) ----- Note ----- 698437 Ring Set (.020" Oversize)	51E	690949	Gasket-Intake
			27	690975	Lock-Piston Pin	53	690951	Stud (Carburetor)
			28	690229	Pin-Piston (Standard)	54	699816	Screw (Intake Manifold) (Used After Code Date 04110500). ----- Note ----- 695240 Screw (Intake Manifold) (Used Before Code Date 04110600).

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Δ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
73	494439	Screen-Rotating	117A	791502	Jet-Main (Standard)	125	791230	Carburetor
74	698425	Screw (Rotating Screen)			(Right Or Cylinder 2) (Used After Code Date 04080300).	125A	792295	Carburetor Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862.
75	691056	Washer (Flywheel)			----- Note -----	125B	796227	Carburetor Used on Type No(s). 0122, 1222.
95	690718	Screw (Throttle Valve)			690989 Jet-Main (Standard) (Used Before Code Date 04080400).	130	690993	Valve-Throttle
98	699721	Kit-Idle Speed (Used After Code Date 04080300).			842627 Jet-Main (Standard) Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.	131	499805	Kit-Throttle Shaft
		----- Note -----						----- Note -----
		499802 Kit-Idle Speed (Used Before Code Date 04080400).						699722 Kit-Throttle Shaft
104	694918	Pin-Float Hinge (Used After Code Date 04080300).	118	695415	Jet-Main (High Altitude) (Left or Cylinder 1) (Used After Code Date 04080300).			Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862.
		----- Note -----			----- Note -----	133	699724	Float-Carburetor (Used After Code Date 04080300).
		690984 Pin-Float Hinge (Used Before Code Date 04080400).			699457 Jet-Main (High Altitude) (Left or Cylinder 1) Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.			----- Note -----
105	698537	Valve-Float Needle (Used After Code Date 04080300).				135	699729	Tube-Fuel Transfer (Used After Code Date 04080300).
		----- Note -----						----- Note -----
		690985 Valve-Float Needle (Used Before Code Date 04080400).	118A	843099	Jet-Main (High Altitude) (Right Or Cylinder 2) (Used After Code Date 04080300).			499806 Float-Carburetor (Used Before Code Date 04080400).
108	699723	Valve-Choke (Used After Code Date 04080300).			----- Note -----			499803 Tube-Fuel Transfer (Used Before Code Date 04080400).
		----- Note -----			699733 Jet-Main (High Altitude) (Right or Cylinder 2) Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.	137	690994	Gasket-Float Bowl
		690968 Valve-Choke (Used Before Code Date 04080400).				141	699722	Kit-Choke Shaft (Used After Code Date 04080300).
117	791501	Jet-Main (Standard) (Left or Cylinder 1) (Used After Code Date 04080300).	121	792455	Kit-Carburetor Overhaul			----- Note -----
		----- Note -----						499807 Kit-Choke Shaft (Used Before Code Date 04080400).
		690232 Jet-Main (Standard) (Used Before Code Date 04080400).						796228 Kit-Choke Shaft
		792296 Jet-Main (Standard) Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.						Used on Type No(s). 0122, 1222.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
142	●699726	Nozzle-Carburetor (Standard) (Used After Code Date 04080300). ----- Note ----- 499808 Nozzle-Carburetor (Standard) (Used Before Code Date 04080400).	209	697674	Spring-Governor ----- Note ----- 793340 Spring-Governor Used on Type No(s). 0115, 0181, 0183, 0185, 0383, 0400. 793341 Spring-Governor Used on Type No(s). 0184. 795086 Spring-Governor Used on Type No(s). 0100, 0101, 0111, 0112, 0114, 0116, 0117, 0118. 793339 Spring-Governor Used on Type No(s). 0862. 796224 Spring-Governor Used on Type No(s). 0122, 1222.	216	691022	Link-Choke ----- Note ----- 796229 Link-Choke Used on Type No(s). 0122, 1222.
146	690979	Key-Timing				217	695409	Spring-Choke Return Used on Type No(s). 0122, 1222.
150	◆690995	Gasket-Nozzle				219	793338	Gear-Governor
160	699727	Retainer-Solenoid (Used After Code Date 04080300). ----- Note ----- 690996 Retainer-Solenoid (Used Before Code Date 04080400).				220	690412	Washer (Governor Gear)
163	★△691001	Gasket-Air Cleaner				222	698761	Bracket-Control ----- Note ----- 796226 Bracket-Control Used on Type No(s). 0122, 1222.
165	693148	Nut (Ring Gear)				227	796223	Lever-Governor Control Used on Type No(s). 0118, 0122, 0185, 1222. ----- Note ----- 796223 Lever-Governor Control (Used After Code Date 08071300). 792492 Lever-Governor Control (Used Before Code Date 08071400).
186	795985	Connector-Hose						
186A	796532	Connector-Hose	211	691019	Spring-Governed Idle ----- Note ----- 796225 Spring-Governed Idle Used on Type No(s). 0122, 1222.	231	690718	Screw (Choke Valve)
187A	791666	Line-Fuel (Cut To Required Length)				239	792028	Switch-Oil Pressure Used on Type No(s). 0111, 0112, 0114, 0183, 0383. ----- Note ----- 697049 Switch-Oil Pressure Used on Type No(s). 0116.
187B	791881	Line-Fuel (Molded)						
187D	791744	Line-Fuel (Molded)	212	695238	Link-Throttle (Used After Code Date 08071300). 792265 Link-Throttle (Used Before Code Date 08071400).			
188	691108	Screw (Control Bracket)	212A	695238	Link-Throttle			
192	690083	Adjuster-Rocker Arm	213	691021	Bracket-Choke Control			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
240A	695666	Filter-Fuel	304	790688	Housing-Blower (Black) (Used Before Code Date 06103000 and After Code Date 04080300).	309	499521	Motor-Starter ----- Note ----- 795121 Motor-Starter Used on Type No(s). 0118.
250	690957	Retainer-Breather				310	691263	Screw (Starter Motor)
252	794389	Collector-Oil	304A	796597	Housing-Blower (Used After Code Date 08091400). ----- Note ----- 791243 Housing-Blower (Used Before Code Date 08091500 and After Code Date 06102900).	311	497608	Brush Set
265	691024	Clamp-Casing				332	691059	Nut (Flywheel)
267	691044	Screw (Casing Clamp .630 Length)	304B	790692	Housing-Blower (Used Before Code Date 04080400).	333	691060	Armature-Magneto
267A	695134	Screw (Casing Clamp .625 Length)	304C	796678	Housing-Blower (Used After Code Date 08100500). Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862, 1222. ----- Note ----- 795878 Housing-Blower (Used Before Code Date 08100600). Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862, 1222. 796678 Housing-Blower (Used on Type No(s). 0122.	334	691061	Screw (Magneto Armature)
267B	792629	Screw (Casing Clamp .703 Length)				337	491055S	Plug-Spark ----- Note ----- 793541 Plug-Spark Used on Type No(s). 0184. 792015 Plug-Spark Used on Type No(s). 0122.
268	691025	Casing-Control Wire				358	694012	Gasket Set-Engine
269	691026	Wire-Control (Cut To Required Length)				363	19203	Puller-Flywheel
270	691027	Nut (Control Wire Casing)				383	19374S	Wrench-Spark Plug
271	691028	Lever-Control				385	691108	Screw (Fuel Pump)
276	690997	Washer-Sealing (Fiber)				387	808656	Pump-Fuel
276A	695410	Washer-Sealing (Aluminum)				404	690442	Washer (Governor Crank)
276B	794271	Washer-Sealing (Aluminum)				405A	697820	Screw (Back Plate)
278	792651	Washer (Governor Control Lever)				415	794903	Plug (Sump)
287	691108	Screw (Dipstick Tube)				418	690999	Plate-Carburetor
300	696226	Muffler Used on Type No(s). 0110.	304D	698073	Housing-Blower (Black) Used on Type No(s). 0101, 0115, 0116, 0181, 0383.	431B	790816	Elbow-Intake (Used After Code Date 04080300).
			305	691005	Screw (Blower Housing)	431C	691011	Elbow-Intake (Used Before Code Date 04080400).
			305B	790690	Screw (Blower Housing)	431D	792297	Elbow-Intake Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	499486	Filter-Air Cleaner Cartridge	552	690552	Bushing-Governor Crank	695	693149	Screw (Ring Gear)
445A	792101	Filter-Air Cleaner Cartridge	----- Note -----			697	690372	Screw (Drive Cap)
445B	792105	Filter-Air Cleaner Cartridge Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862, 1222.		796638	Bushing-Governor Crank Used on Type No(s). 0118, 0122, 0185, 1222.	703	691010	Clip
447	691003	Screw (Air Guide Cover)	552A	690553	Bushing-Governor Crank	718	690959	Pin-Locating
447A	691108	Screw (Air Guide Cover)	562	690311	Bolt (Governor Control Lever)	726	499612	Gear-Ring
467	790697	Knob-Air Cleaner (1 1/2" Long)	573	790444	Plate-Back	729	694123	Clip-Wire
467A	691008	Knob-Air Cleaner	578A	691208	Wire Assembly	741	690980	Gear-Timing
474A	696457	Alternator (Tri Circuit)	579	691029	Nut (Starter Cable)	742	690328	Retainer-E Ring
474C	696459	Alternator (Dual Circuit)	601	791850	Clamp-Hose	750	696999	Screw (Oil Pump Cover)
474D	696458	Alternator (10-16 Amp Regulated)	601A	691038	Clamp-Hose	750B	796208	Screw (Oil Pump Cover) Used on Type No(s). 0118, 0122, 0185, 1222.
501B	691185	Regulator (10-16 Amp Regulated)	613	690341	Screw (Muffler)	783	695708	Gear-Pinion
501A	691188	Regulator (Tri Circuit)	613A	690297	Screw (Muffler)	788	691039	Bracket-Fuel Pump (Used Before Code Date 06072800).
505	691029	Nut (Governor Control Lever)	615	698290	Retainer-Governor Shaft	788A	793145	Bracket-Fuel Pump (Used After Code Date 06072700).
510	696541	Drive-Starter	616	691045	Crank-Governor	789A	790544	Harness-Wiring
512	796530	Hose-Oil Drain	617	697891	Seal-O Ring (Intake Manifold)	789B	698330	Harness-Wiring
513	692024	Clutch-Drive	628	691108	Screw (Fuel Pump Bracket) (Used Before Code Date 06072800).	789D	691220	Harness-Wiring
523	691036	Dipstick	633 ♦♦690998	Seal-Choke/Throttle Shaft	797	693167	Nut (Brush Retainer)	
524	★691032	Seal-Dipstick Tube	----- Note -----			798	697890	Screw (Rocker Arm)
525	691037	Tube-Dipstick		699813	Seal-Choke/Throttle Shaft Used on Type No(s). 0122, 1222.	801	691283	Cap-Drive
526	691108	Screw (Regulator) (10-16 Amp Regulated)	635	66538S	Boot-Spark Plug	802	691286	Cap-End
526A	691129	Screw (Regulator)	654	690958	Nut (Carburetor)	842	★691031	Seal-O Ring (Dipstick Tube)
			668	691215	Spacer	847	499602	Dipstick/Tube Assembly
			672 ♦♦690234	Gasket-Carburetor Plate	850	100100	Sealant-Silicone	
			691	★790574	Seal-Governor Shaft	851	493880S	Terminal-Spark Plug
						855A	698072	Adapter-Air Cleaner Used on Type No(s). 0115, 0116, 0181, 0383.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Δ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
865	691012	Cover-Air Guide (Cylinder 1)	943	★690589	Seal-O Ring (Oil Pump Cover)	975	499810	Bowl-Float
865A	793205	Cover-Air Guide (Cylinder 2)	943A	★796222	Seal-O Ring (Oil Pump Cover)	975A	793592	Bowl-Float
		----- Note -----			Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.			Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.
		796541 Cover-Air Guide (Cylinder 2)	947	699728	Solenoid-Fuel (Used After Code Date 04080300).	987	●691000	Seal-Throttle Shaft
		Used on Type No(s). 0118, 0122, 0185, 1222.			----- Note -----	1005	791236	Fan-Flywheel (Used After Code Date 06102900).
865B	691015	Cover-Air Guide (Valley)			499809 Solenoid-Fuel (Used Before Code Date 04080400).			----- Note -----
		Used on Type No(s). 0100, 0111, 0112, 0114.	947A	841546	Solenoid-Fuel (Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0400, 0862, 1222.			790698 Fan-Flywheel (Used Before Code Date 06103000 and After Code Date 04080300).
		----- Note -----			965 499613 Cover-Oil Pump			499603 Fan-Flywheel (Used Before Code Date 04080400).
		792286 Cover-Air Guide (Valley)	965A	796221	Cover-Oil Pump (Used on Type No(s). 0118, 0122, 0185, 1222.			698760 Fan-Flywheel (Used on Type No(s). 0101, 0115, 0116, 0181, 0383.
		Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.	967	273638S	Filter-Pre Cleaner	1013	690954	Nipple-Oil Filter
868	★Δ690968	Seal-Valve	967B	792303	Filter-Pre Cleaner (Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862, 1222.	1017	690770	Screen-Oil Pump
877B	393456	Wire/Connector-Alternator (Dual Circuit)			968 795120 Cover-Air Cleaner (Used on Type No(s). 0117, 0118, 0183, 0184, 0185, 0400, 0862, 1222.	1017A	796214	Screen-Oil Pump (Used on Type No(s). 0118, 0122, 0185, 1222.
877C	393537	Wire/Connector-Alternator (Tri Circuit)			968A 790689 Cover-Air Cleaner (Used Before Code Date 06103000 and After Code Date 04080300).	1022	★Δ690971	Gasket-Rocker Cover
877D	399916	Wire/Connector-Alternator (10-16 Amp Regulated)			968B 790095 Cover-Air Cleaner (Used Before Code Date 04080400).	1023	499599	Cover-Rocker (Cylinder 1)
878C	398661	Harness-Alternator (Dual Circuit)			968C 791242 Cover-Air Cleaner (Used After Code Date 06102900).	1023A	793146	Cover-Rocker (Cylinder 2) (Used After Code Date 06072700).
883	★Δ690970	Gasket-Exhaust			968E 790096 Cover-Air Cleaner (Used on Type No(s). 0101, 0115, 0116, 0181, 0383.			----- Note -----
914	691127	Screw (Rocker Cover)						499600 Cover-Rocker (Cylinder 2) (Used Before Code Date 06072800).
918	793147	Hose-Vacuum (Used After Code Date 06072700).				1024A	794416	Pump-Oil
		----- Note -----				1024B	796220	Pump-Oil (Used on Type No(s). 0118, 0122, 0185, 1222.
		694000 Hose-Vacuum (Used Before Code Date 06072800).						
929	695239	Screw (Choke Control Bracket)						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1026	690981	Rod-Push (Steel)	1090	691293	Retainer-Brush	1126	690991	Screw (Fuel Transfer Tube)		
1026A	690982	Rod-Push (Aluminum)	1095	694013	Gasket Set-Valve	1127	690992	Screw (Float Bowl)		
1027	492932S	Filter-Oil	1100	791959	Pivot-Rocker Arm	1127A	695407	Screw (Float Bowl)		
1027A	696854	Filter-Oil	1119	691183	Screw (Alternator)			Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222. (Float Bowl)		
1029	690972	Arm-Rocker	1123	●699725	Seal-O Ring (Solenoid Retainer) (Used After Code Date 04080300).	1128	●690990	Screw (Carburetor Nozzle)		
1035	691042	Shaft-Pump (Used Before Code Date 07022600).			----- Note ----- ●◆690987 Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04080400).	1267	698440	Latch-Blower Housing Used on Type No(s). 0101, 0115, 0116, 0181, 0383.		
1036		Label-Emissions (Available from a Briggs & Stratton authorized Service Dealer)	1123A	●841653	Seal-O Ring (Solenoid Retainer) Used on Type No(s). 0117, 0118, 0122, 0183, 0184, 0185, 0400, 0862, 1222.	1319	794467	Label-Warning		
1040	791237	Plate-Trim			1124	●◆690988	Seal-O Ring (Fuel Transfer Tube)	1330	273521	Repair Manual
1051	691265	Ring-Retaining						1342	699731	Extension-Fuel Transfer Tube
1054	280275	Tie-Cable								
1058	277103	Operator's Manual								
1059	698516	Kit-Screw/Washer								
1070	690372	Screw (Flywheel Fan) (Used After Code Date 04080300).								
		----- Note ----- 691674 Screw (Flywheel Fan) (Used Before Code Date 04080400). 691058 Screw (Flywheel Fan) Used on Type No(s). 0115, 0116, 0383.								

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

